


Align beveled edge side of connector with edge of Mirage Mat so that they are aligned in the same direction.

Attach suction tube to other side of connector

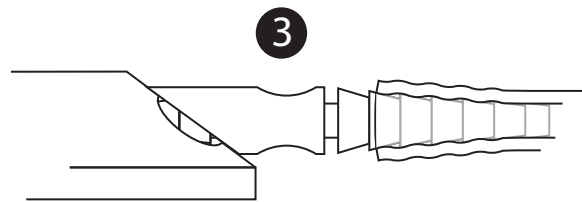

Push connector fully into slot.
Final product should look like image above